


# *9466-ET*

## *Managed Ethernet Switch*

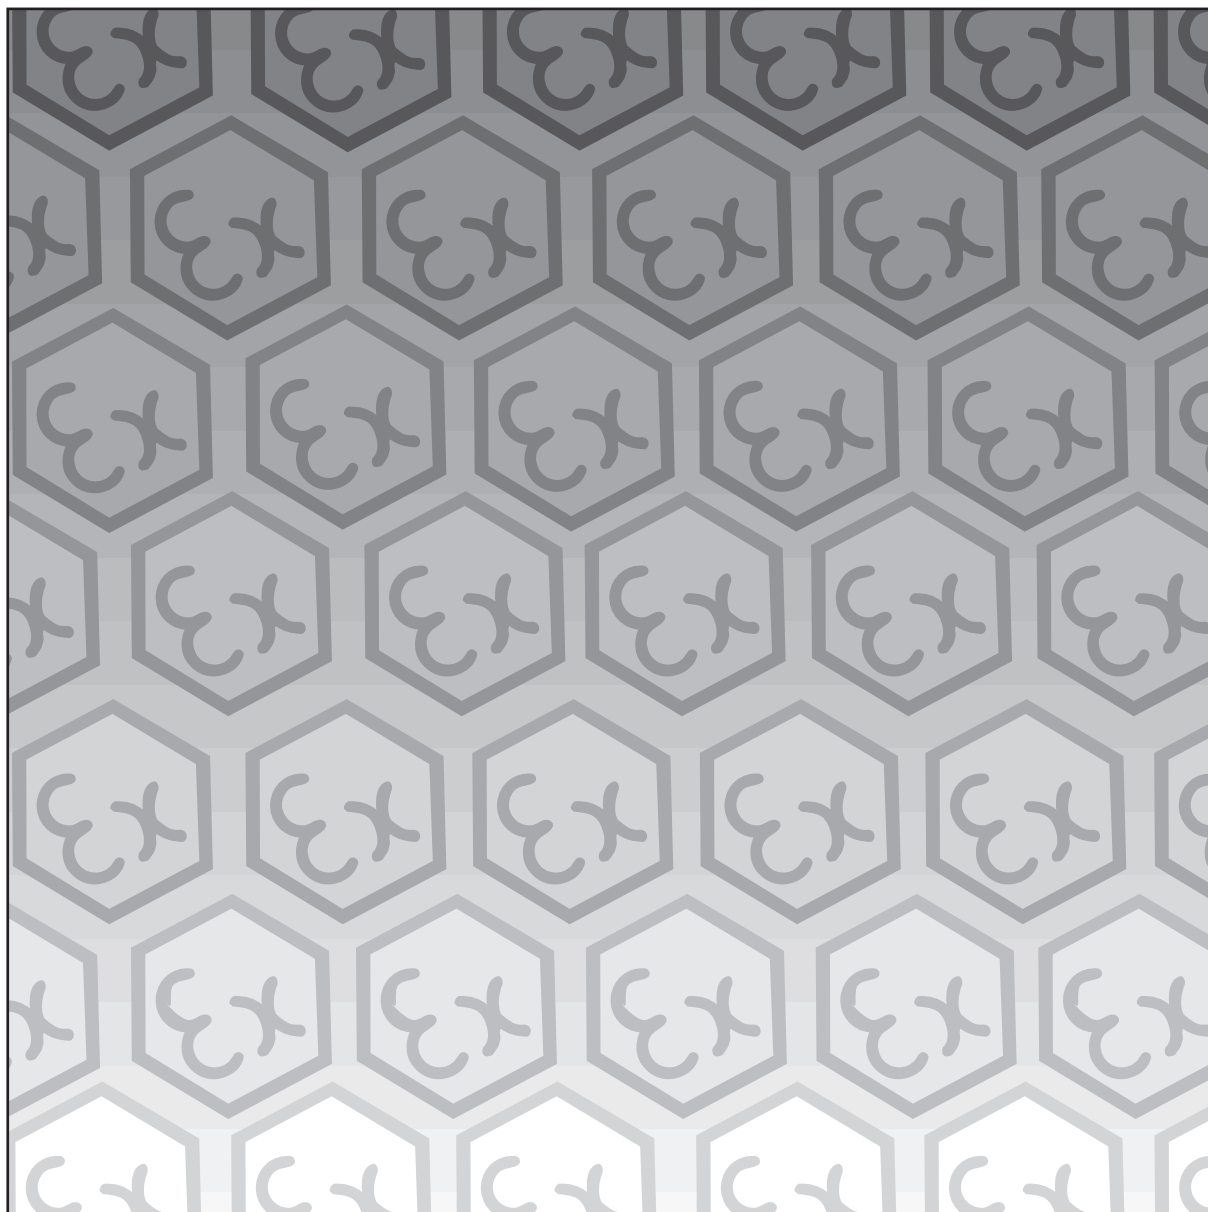

**Instruction Manual**

**INM9466**



# CONTENTS

- 1. **FEATURES** ..... 1
- 2. **DESCRIPTION** ..... 2
- 3. **INSTALLATION** ..... 2
  - 3.1 **Protection** ..... 2
  - 3.2 **Mechanical mounting** ..... 3
  - 3.3. **Electrical connections** ..... 3
- 4 **PC PACKAGE REQUIREMENTS** ..... 4
- 5 **SOFTWARE INSTALLATION** ..... 4
- 6 **COMMUNICATING WITH THE 9466-ET** ..... 4
  - 6.1 **In the safe area** ..... 4
  - 6.2 **In the hazardous area** ..... 4
- 7 **LAUNCHING THE PROGRAM** ..... 4
- 8 **MAIN SCREEN** ..... 5
  - 8.1 **Menu Bar** ..... 5
- 9 **VLAN** ..... 6
- 10 **RATE LIMIT** ..... 7
- 11 **MIRRORING** ..... 8
- 12 **MIB COUNTERS** ..... 9
- 13 **STATIC MAC ADDRESSES** ..... 9
- 14 **DYNAMIC MAC ADDRESSES** ..... 10
- 15 **DOWNLOADING NEW SOFTWARE** ..... 10
- 16 **ENVIRONMENTAL** ..... 11
- 17 **WASTE REMOVAL INFORMATION** ..... 11
- 18 **ACCESSORIES** ..... 11
- 19 **APPROVALS** ..... 12
- 20 **FM CERTIFICATION INFORMATION** ..... 12
- 21 **ATEX & IECEx CERTIFICATION INFORMATION** ..... 12



## 1. FEATURES

- ◆ Intrinsically Safe ATEX / IECEx certified / FM / FMC approved
- ◆ Ga Ex ia IIC T4 GD (surface), Ma Ex ia I M1 (mining)
- ◆ Zone 1/ Division 1 mounting in a suitable enclosure
- ◆ Input voltage: 12V dc nominal (10 – 15.4V)
- ◆ Input current 200mA
- ◆ Extended temperature range (-20°C...+70°C)
- ◆ PoEx™ - "Power over Ethernet" power sourcing equipment - distributes device supplies via the RJ45 ports\*
- ◆ 5x Port 10/100Mb Ethernet twisted pair (Cat5e) RJ45 Connections (100m max)
- ◆ Status LED's For :
  - 'Power On'
  - Copper UTP 'Half/Full Duplex' (each port)
  - Copper UTP '10Mbps/Activity' (each port)
  - Copper UTP '100Mbps/Activity' (each port)
- ◆ 10/100Mbps Half/Full Duplex with Auto-Negotiation
- ◆ Supports MDI / MDI-X auto crossover (easy cascading of switches with standard straight connected 1:1 cables)
- ◆ Broadcast storm protection – eliminates network overload caused by excessive 'broadcast' and 'multicast' packets.
- ◆ Intelligent Routing - Automatic address learning, aging and migration
- ◆ Supports IEEE 802.3: 10Base-T, 100Base-TX
- ◆ IEEE 802.1q Tag/Port based VLAN, Quality of Service (QoS) priority
- ◆ Programmable Managed features (Serial port) VLAN, Rate Limiting, Port Mirroring etc
- ◆ DIN-rail mounting module

*\*Note – PoEx is a simple adaptation of the IEEE 802.3af Power over Ethernet (PoE) standard to bring the benefits to the 9400 Range of Hazardous Area devices. This allows two spare pairs in the existing Cat5e cable to distribute the power supply from a 9466-ET Ethernet Switch (Power Sourcing Equipment – PSE) to each of the devices connected to its five ports (PD – Powered Device). This adaptation is necessary due to restrictions for Hazardous Area use. It is not implied that the device conforms to the 802.3af (PoE) standard.*

## 2. DESCRIPTION

The 9466-ET 10/100Mbps Managed Layer 2 Ethernet Switch allows the interconnection of other 9460-ET Series networking modules via its 5x ports, it also enables an Ethernet network to cover a greater distance, either using Cat5e cable or fibre-optic for longer spans, this is down to the low latency 'store and forward' mechanism integral to the switch which ensures that the stringent timing associated with Ethernet is maintained. With the 9466-ET switch, each connection is effectively a 'point-to-point' network segment unlike the older generation hubs that were simple 'dumb' repeaters – these needed to impose a limit on overall network length to ensure proper collision detection, this limit is overcome by using the 9466-ET.

The 9466-ET switch can also distribute power to compatible devices connected to each of its five ports via the RJ45 Cat5e cables (PoEx), this eliminates the separate power supply cable to the device simplifying installation and maintenance.

The default mode of operation is a 5 port unmanaged switch with auto negotiation. However the onboard EEPROM memory can be configured via the serial RS232/TTL port either in the Safe Area, using a PC; or in the Hazardous Area using the 9461-ET Ethernet Gateway as its host processor. Features such as Programmable Rate Limiting, VLAN support Port Mirroring and Forced Speed and Duplex settings may be configured in this way if required. The 9461-ET module can also perform its usual function of a serial communications gateway (eg: serial Modbus to Ethernet conversion) whilst giving 'online' access to the managed features of the 9466-ET switch over the Ethernet network, including the MIB counters for each port.


## 3. INSTALLATION



**WARNING:** This equipment must be installed, operated and maintained only by trained competent personnel and in accordance with all appropriate international, national and local standard codes of practice and site regulation for intrinsically safe apparatus and in accordance with the instructions contained here. See also Sections 19, 20 & 21 for approvals and important conditions of safe use.

### 3.1 Protection

The module requires mounting within an enclosure providing a degree of protection of at least IP6x, in accordance with EN60529 and in a manner that does not impair the existing creepage and clearance distances. The enclosure must also comply with the requirements of Clauses 7 and 8 of EN50014 and be sealed to prevent the ingress of dust.

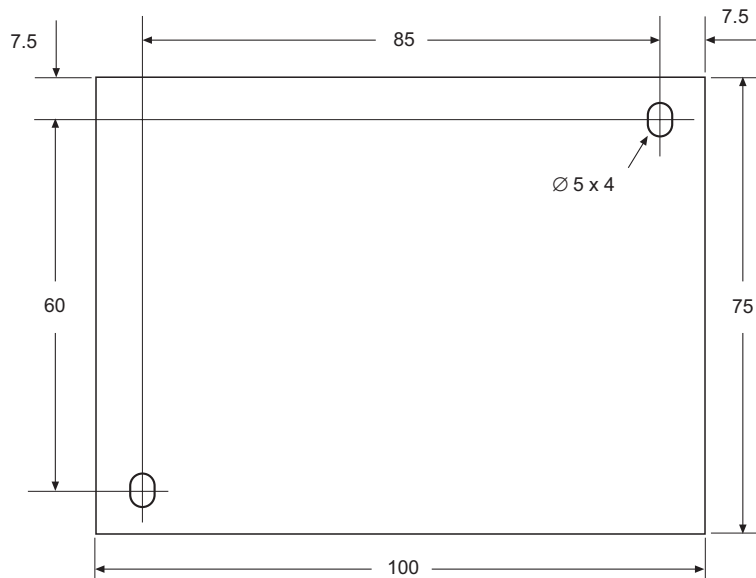

## 3.2 Mechanical mounting


### 3.2.1 DIN rail mounting

The module will 'snap-fit' onto standard DIN rail (TS35) to EN 50022. Height off rail - including any connectors but excluding cables = 106mm. Tilt the module to engage the top DIN rail clips then rotate down and press to the DIN rail until the lower spring clip is properly engaged.

### 3.2.2 Flat panel mounting

The module has two fixing holes to enable it to be mounted with two M3.5 screws. Use the dimension diagram on the previous page to establish the hole positions. Depth - including connectors but excluding cables = 111mm.

## 3.3. Electrical connections

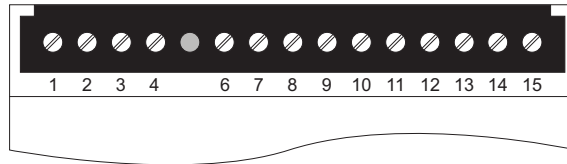

### 3.3.1 Screw Terminals

#### DC power input

Terminal No.	Function	
1	+12V dc in	9466-ETmodule supply
2	+12V dc in	
3	0V	
4	0V	
5	No connection	
6	+12V dc in	PoEx - Port 1 (see Note 2)
7	0V	
8	+12V dc in	PoEx - Port 2 (see Note 2)
9	0V	
10	+12V dc in	PoEx - Port 3 (see Note 2)
11	0V	
12	+12V dc in	PoEx - Port 4 (see Note 2)
13	0V	
14	+12V dc in	PoEx - Port 5 (see Note 2)
15	0V	

Note: 1. Terminals 1 & 2 and 3 & 4 are linked internally.

2: For PoEx – connect IS supplies to terminals 6 to 15 as required.



**WARNING:** The supply for PoEx must be derived from a suitably certified, intrinsically safe supply.

### 3.3.2 Front Panel Connectors

#### 10/100 BASE-T Ethernet RJ45

Pin No.	Function
1	TX +
2	TX –
3	RX +
4	Supply 12V - PoEx
5	Supply 12V - PoEx
6	RX –
7	Supply 0V - PoEx
8	Supply 0V - PoEx

As the 9466-ET Ethernet switch supports Auto MDI/MDI-X, a straight connected RJ45 Cat5e cable is used to connect to any device.

It is recommended that Cat5e cables for Hazardous Area Zone 1 use are 'Blue' in colour and are of good quality (see accessories section), the Safe Area cables being a colour other than blue to aid identification.

## 4 PC PACKAGE REQUIREMENTS

In order to run the package on a PC, the following minimum system configuration is required:-

- Pentium® 3 Processor or Equivalent
- 256 Mb RAM minimum
- Windows® 98(or higher)
- Serial Communications Port

## 5 SOFTWARE INSTALLATION

**Note: Sections 5 through to 15 are relevant only if you require the 9466-ET switch to operate in the *managed* mode.**

The 9466-ET Ethernet switch management software is provided on a CD along with the hardware. If the CD is not available for some reason, download the software from the Industrial Networks section of MTL's website at [www.mtl-inst.com](http://www.mtl-inst.com).

**If installing from the CD** - Place the CD into the CD or DVD drive on a PC. If the Setup application does not Autorun then use Start|Run from the Windows menu and run the *setup.exe* application on the CD to launch the installation program.

**If installing from downloaded files** - Unzip the file into a temporary directory, then run the resulting *setup.exe* application in that directory to launch the installation program.

In either case, this is a conventional installation program that requires the user to specify a destination directory for the application software, after which the setup will continue. Follow the on-screen instructions to complete the installation.

## 6 COMMUNICATING WITH THE 9466-ET

### 6.1 In the safe area

Connect the 9466-ET Ethernet Switch to your PC using the CAB9466 RS communications lead that is supplied with the switch. The 9-pin miniature D-type connector should be plugged into a Serial Communications (COM) port on the PC and the other end of the cable should be plugged into the RS232 connector on the front panel of the 9466-ET Switch. Apply 12V dc power to the switch and then open the Configuration Software application.

### 6.2 In the hazardous area

If the 9466-ET is installed in an intrinsically safe system in the hazardous area then the 9461-ET Ethernet Gateway is required to connect to the 9466-ET from the safe area. Set up the 9461-ET as instructed in its manual


## 7 LAUNCHING THE PROGRAM

To run the program, double click the 9466-ET Management icon. A splash screen, of the type shown below, will appear which displays the version number of the software.



## 8 MAIN SCREEN

The following screen is the main page of the software and appears upon launch. On the left it shows the status of the switch along with version numbers.

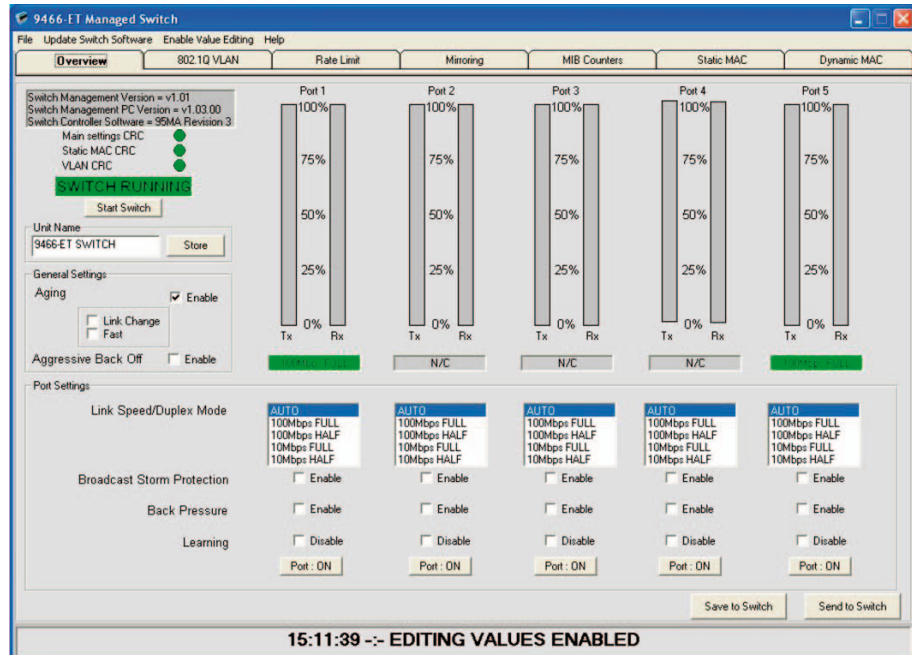

To the right of the status is the port usage. This provides an easy to view insight into the amount of throughput on the switch and whether the Ethernet Architecture needs any maintenance.

Below these vertical bars are the settings for each of the ports, the link Speed/Duplex Mode, Broadcast Storm Protection, Back Pressure, Learning and Port ON/Off.

At the side there are the options regarding Aging. This allows for aging to be enabled, with Link Change or Fast and whether Aggressive Back Off is required.

In order to alter any of the parameters, Value Editing must be enabled. This is done by clicking on the Enable Value Editing Menu Bar option and entering the password: 216231

Note: Value editing permission times-out after approximately 5 minutes.

After modifications are made they need to be sent or saved to the switch. Sending to the switch is only temporary and will be lost on a power down whereas saving is permanent.

Also on this, and every, page is the status bar at the bottom. This records the last event that has happened. Events can include Switch Offline, Settings Saved or Sent etc.

### 8.1 Menu Bar

At the top of the window is the menu bar, which gives the following options:-

#### File Menu

##### Open and Send Settings to the Switch

This option allows the user to open a switch settings file and send it to the switch. These settings will not be stored and will be lost after a power down.

##### Open and Save settings to the Switch

This option allows the user to open a switch settings file and save it to the switch.

##### Save Switch Settings

This option allows the user to save the current switch settings to a file.

##### Comm Port Setting

Use this to specify the PC comm port that is connected to the switch. Enter a valid number and click OK.

##### Exit

This option allows the user to exit the Switch Management Software.

## Update Switch Software

This password controlled option allows you to change the software running in the 9466-ET. This function is only recommended in a controlled environment.

## Enable Value Editing

This option asks for a password which will enable value editing. This step is essential for modifying the details contained on the tabbed pages described in the next sections.


## Help

This opens up a PDF version of this document.

## 9 VLAN

The 9466-ET supports 16 different tag-based VLANs. There are 12 bits in the IEEE802.1Q VLAN ID field, allowing for 4096 different VLAN ID's. The 9466-ET supports 16 active VLANs. Any one of the 4096 available VLAN ID's can be specified as one of the active VLANs. If a non tagged packet or a null VID packet is received the 9466-ET will use the ingress ports programmable default VID for look up.

Click *Enabling Value Editing* and enter the password. In order to use the 802.1Q VLAN, it must be enabled by selecting the Enabled 802.1Q VLAN checkbox.

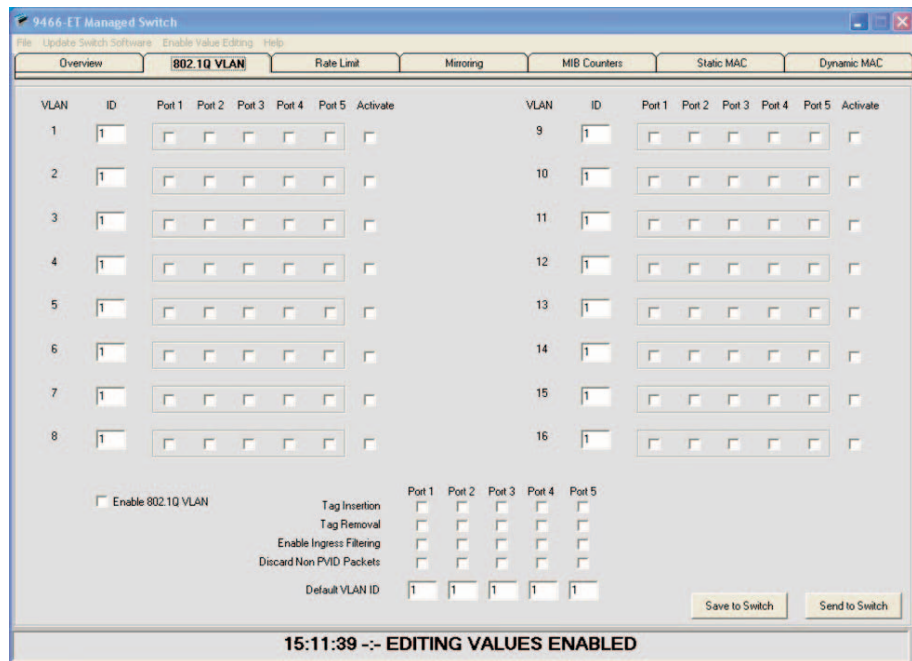

As can be seen on the above screen the 16 VLANs can be configured with an ID, port members and whether currently active.

Also parameters for each of the ports can be set at the bottom, Tag Insertion, Tag Removal, Ingress Filtering Enable, Discard Non PVID Packets and the Ports Default VLAN ID.

Again as seen on the other page, once the settings have been altered you can Save or Send them to the switch.



## 10 RATE LIMIT

The 9466-ET supports programmable rate limiting on a per port basis. After password entry, Transmit and receive rate limits for each port can also be programmed independent of one another. The user can program a different rate limit for high and low priority packets. The rate limit can be programmed up to the line rate in increments of 32,768 bps.


The screenshot displays the 'Rate Limit' configuration page for a 9466-ET Managed Switch. The interface is organized into a table with columns for 'Disable Priority', 'High Priority', and 'Low Priority', each containing 'TX' and 'RX' sub-columns. For each of the five ports (Port 1 to Port 5), there are checkboxes for 'Disable Priority', 'TX', and 'RX' under each category. Rate limit values are entered in 'Mbps' fields, and 'Enable' checkboxes are provided for each. Priority options are selected via radio buttons: 'Diffser', '802.1p', 'Port Based', and 'None'. At the bottom, there is an 'Enable Flow Control' checkbox and a note: '\*This check box only controls flow control for rate limit'. 'Save to Switch' and 'Send to Switch' buttons are located at the bottom right. The status bar at the very bottom indicates '15:11:39 :- EDITING VALUES ENABLED'.

On the above screen the rates can be set in Mbps for both low and high priority messages. To limit High priority messages ensure the Disable Priority check boxes are not selected. The rate limits can be enabled by selecting the check boxes on the appropriate limit. The priority for each port can be set to be Diffser, 802.1p, Port Based or None.

Again as seen on the previous pages, once the settings have been altered you can Save or Send them to the switch.

## 11 MIRRORING

The 9466-ET provides a facility to mirror (i.e. copy) information on one, or more, ports to other ports. Three options are available after *Enabling Value Editing* using the password.

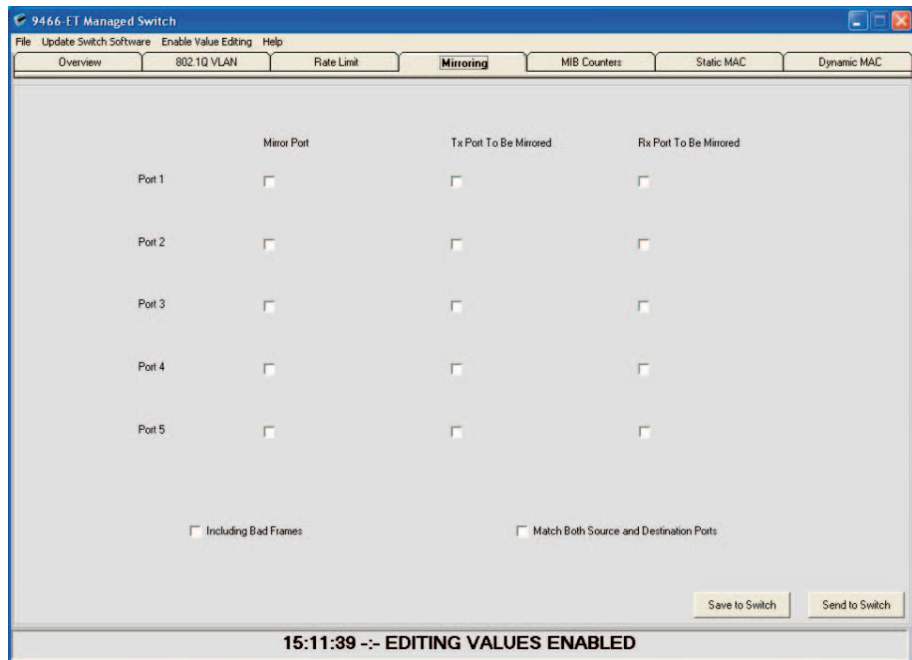

- **“Receive only” port mirroring**

Information **received** on a port can be mirrored (copied) to another port(s).

- **“Transmit only” port mirroring**

Information **transmitted** on a port can be mirrored to another port (s).


- **“Receive and Transmit” port mirroring**

Information received on a port and information transmitted on a port can be mirrored to another port(s).

Specify the port(s) by checking the boxes for the ports. In the *first* column (Mirror Port) you specify the ports to *receive* the mirrored information, then check boxes in the second and third columns to specify which ports are to mirror their Tx or Rx data respectively.

## 12 MIB COUNTERS

The 9466-ET offers 34 MIB counters per port. These counters are used to monitor port activity for network management. Click *Enabling Value Editing* and enter the password.

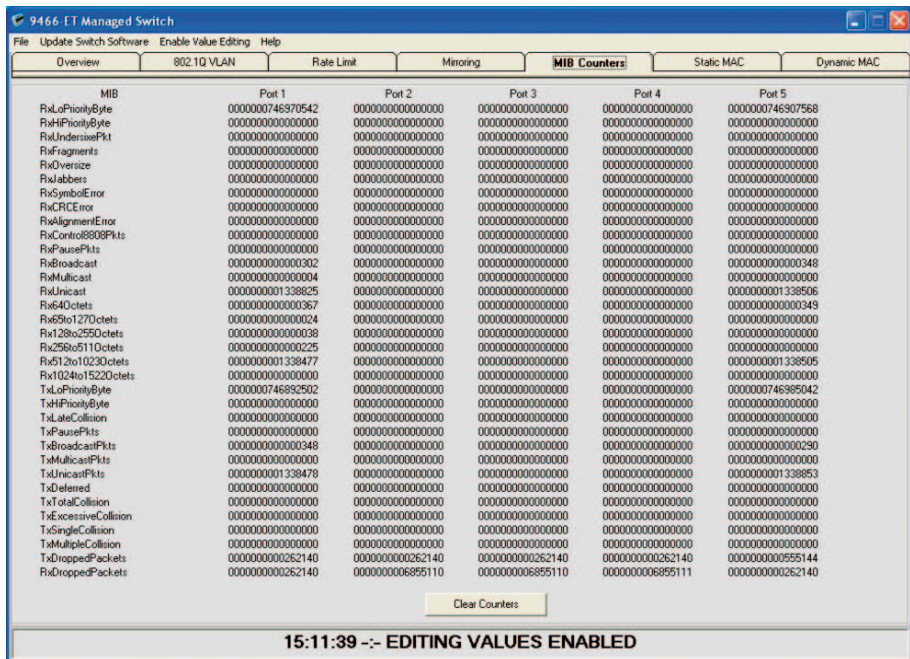


Use the button at the bottom of the display to zero the MIB counters and remove earlier stats.

## 13 STATIC MAC ADDRESSES

The 9466-ET offers 8 static MAC settings. These can be allocated a VLAN ID or set at 0 to allow MAC lookup. Click *Enabling Value Editing* and enter the password.


The port to forward the messages for the static MAC can be selected and whether or not to override the spanning tree. Static MACs can be activated or deactivated using the checkbox on the far right.

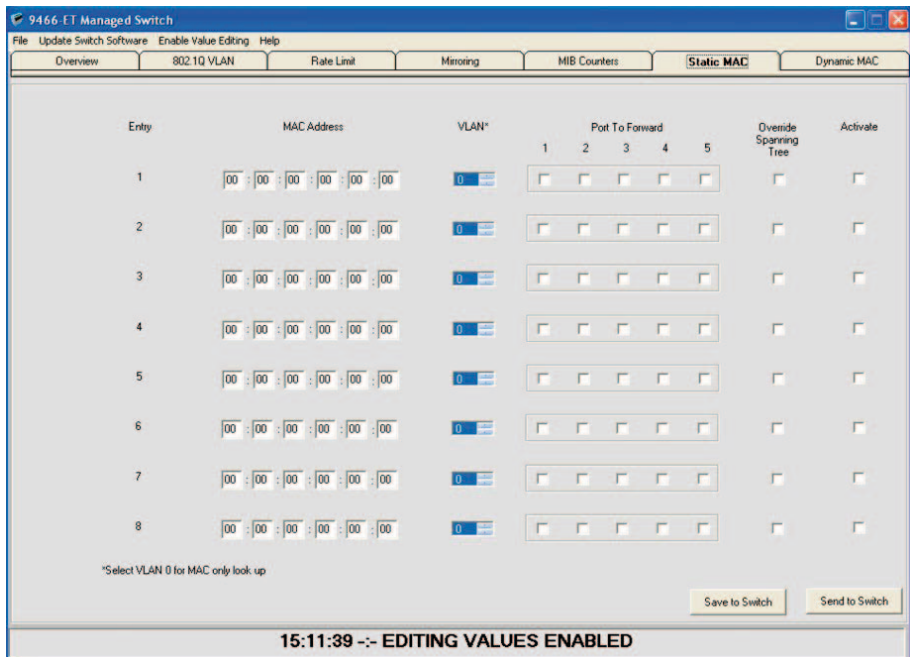

These settings can easily be Saved or Sent to the switch by clicking one of the buttons in the lower right corner of the display.


## 14 DYNAMIC MAC ADDRESSES

The Dynamic MAC address page shows all the devices visible on each of the 5 ports of the 9466-ET switch. Click *Enabling Value Editing* and enter the password.

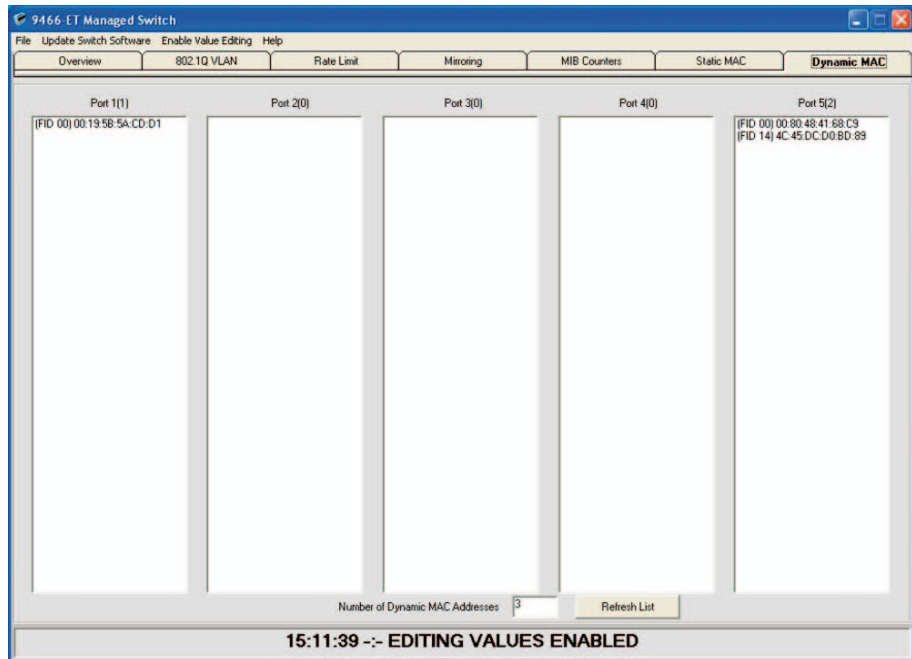


Click the Refresh List button to refresh the list if required.

## 15 DOWNLOADING NEW SOFTWARE

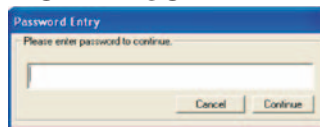


The 9466-ET has the facility to upgrade its software. To begin this action, select the Update Switch

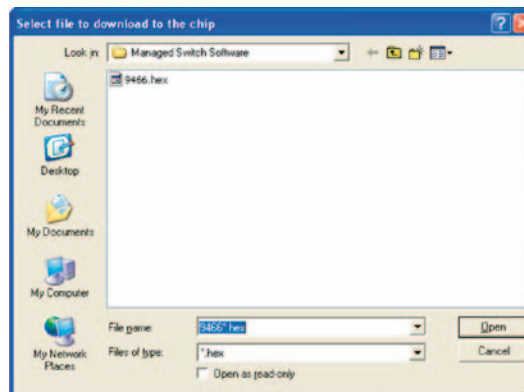


Software menu bar option, which will bring up the password dialog box.

After password entry a file selection window will appear.

Select the software file you wish to load into the 9466-ET Switch and click the Open button. The following warning will appear on screen:

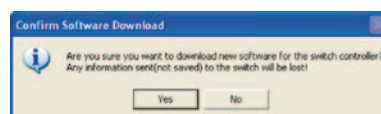

Click *No* if you need to return and save a configuration or *Yes* if you want the download to the switch to begin.

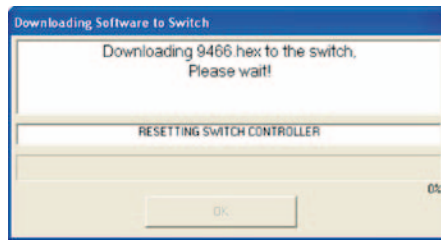

A bar will indicate progress. When the download has finished simply click OK and the switch will be running the new software.

## 16 ENVIRONMENTAL

Operating Temperature	-20°C...+70°C
Storage Temperature	-20°C...+70°C
Humidity	5...95% RH, non condensing

## 17 WASTE REMOVAL INFORMATION



The electronic equipment within must not be treated as general waste. By ensuring that this product is disposed of correctly you will be helping to prevent potentially negative consequences for the environment and human health, which could otherwise be caused by incorrect waste handling of this product.

For more detailed information about the take-back and recycling contact **MTL**.

## 18 ACCESSORIES

For interconnecting the 9460-ET range of products, we offer approved RJ45 Cat5e UTP cables in various standard lengths (0.5...100m)

### Ordering details

Copper Twisted Pair UTP Patch Cable (Blue) pre-terminated RJ45-RJ45 connectors

Part No. CSL9405-xx (where 'xx' suffix signifies the length of the cable)

## 19 APPROVALS

The operating parameters must not exceed those as detailed on the certificate.

- 2004/108/EC EMC Directive
- 2006/95/EC Low Voltage Directive

Region	Europe (ATEX)	International IECEx	USA	Canada
Authority	SIRA	SIRA	FM	FMC
Standard	EN 60079-0:2006, EN 60079-11:2007, IEC 60079-26:2006, EN 60079-28:2007, EN 50303:2000, IEC 61241-0:2004, IEC 61241-11:2005	IEC 60079-0:2004, IEC 60079-11:2006, IEC 60079-28:2006-08, IEC 61241-0:2004, IEC 61241-1:2005	3600 3610 3810	C22.2 No. 61010.1:2004 C22.2 No. 157:1992 CAN/CSA-E60079-0:2007 CAN/CSA-E60079-11:2002
Approved for	⊕ II 1GD Ga Ex ia IIC T4 Ex iaD 20 T135°C (Ta = -40°C to +70°C)* ⊕ I M1 Ma Ex ia I (Ta = -40°C to +70°C)	Ga Ex ia IIC T4 Ex iaD 20 T135°C Ma Ex ia I (Ta = -40°C to +70°C)*	IS/I/1/ABCD/T4 Ta=70°C I/O/AEx ia IIC T4 Ta=70°C	IS/I/1/ABCD/T4 Ta=70°C I/O/AEx ia IIC T4 Ta=70°C
Cert. no.	Sira 07ATEX2064X	IECEX SIR 07.0042X	3034995	3034995C

\* see specification for operating temperature range

## 20 FM CERTIFICATION INFORMATION

### Special Condition of Use - Factory Mutual (USA & Canada)

1. The Model 9466-ET shall be installed in compliance with the enclosure, mounting, spacing and segregation requirements of the ultimate application.
2. The Model 9466-ET shall be excluded from use in environments containing chemical vapours of the Ketone or Ester families.

## 21 ATEX & IECEx CERTIFICATION INFORMATION

The following information is in accordance with the Essential Health and Safety Requirements (Annex II) of the EU Directive 94/9/EC [the ATEX Directive - safety of apparatus] and is provided for those locations where the ATEX Directive is applicable.

### General

- a. This equipment must only be installed, operated and maintained by competent personnel. Such personnel shall have undergone training, which included instruction on the various types of protection and installation practices, the relevant rules and regulations, and on the general principles of area classification. Appropriate refresher training shall be given on a regular basis. [See clause 4.2 of EN 60079-17].
- b. This equipment has been designed to provide protection against all the relevant additional hazards referred to in Annex II of the directive, such as those in clause 1.2.7.
- c. This equipment has been designed to meet the requirements of intrinsically safe electrical apparatus in accordance with EN 60079-0, EN 60079-11 and EN 60079-26.

### Installation

- a. reference to the IEC code of practice IEC 60079-14. In addition, particular industries or end users may have specific requirements relating to the safety of their installations and these requirements should also be met. For the majority of installations the Directive 1999/92/EC [the ATEX Directive - safety of installations] is also applicable.

- b. Unless already protected by design, this equipment must be protected by a suitable enclosure against:
  - i) mechanical and thermal stresses in excess of those noted in the certification documentation and the product specification.
  - ii) aggressive substances, excessive dust, moisture and other contaminants.
- c. This equipment is intrinsically safe electrical apparatus and is normally mounted in a hazardous area. When mounted in a Zone1 location the apparatus must be provided with an enclosure, which offers an additional degree of protection appropriate to the area classification.

Read also the Special Conditions for Safe Use for any additional or more specific information.

**Special Conditions for Safe Use**

1. When used with Group I gases, the Modules shall each be mounted within an enclosure providing a degree of protection of at least IP54, in accordance with EN 60529, and in a manner that does not impair the existing creepage and clearance distances. The enclosure shall also comply with the requirements of Clauses 7 and 8 of EN 60079-0:2006.
2. The connectors do not meet the ingress protection rating of IP20, therefore, this shall be taken into consideration during the installation of the 9400 Series Ethernet Modules when used with Group II gases, and each module shall be provided with an enclosure that is commensurate with the environment into which it is installed.
3. The supply to the modules must be derived from a suitably certified, intrinsically safe supply.

**Inspection and maintenance**

- a. Inspection and maintenance should be carried out in accordance with European, national and local regulations which may refer to the IEC standard IEC 60079-17. In addition specific industries or end users may have specific requirements which should also be met.
- b. Access to the internal circuitry must not be made during operation.


**Repair**

This product cannot be repaired by the user and must be replaced with an equivalent certified product.


**Marking**

Each device is marked in accordance with the Directive and CE marked with the Notified Body Identification Number.

This information applies to products manufactured during or after the year 2010.

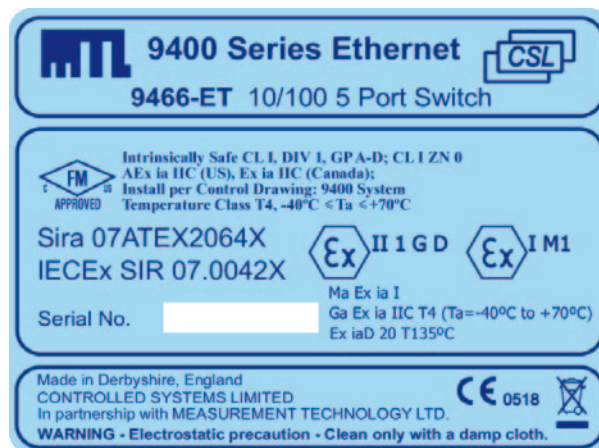



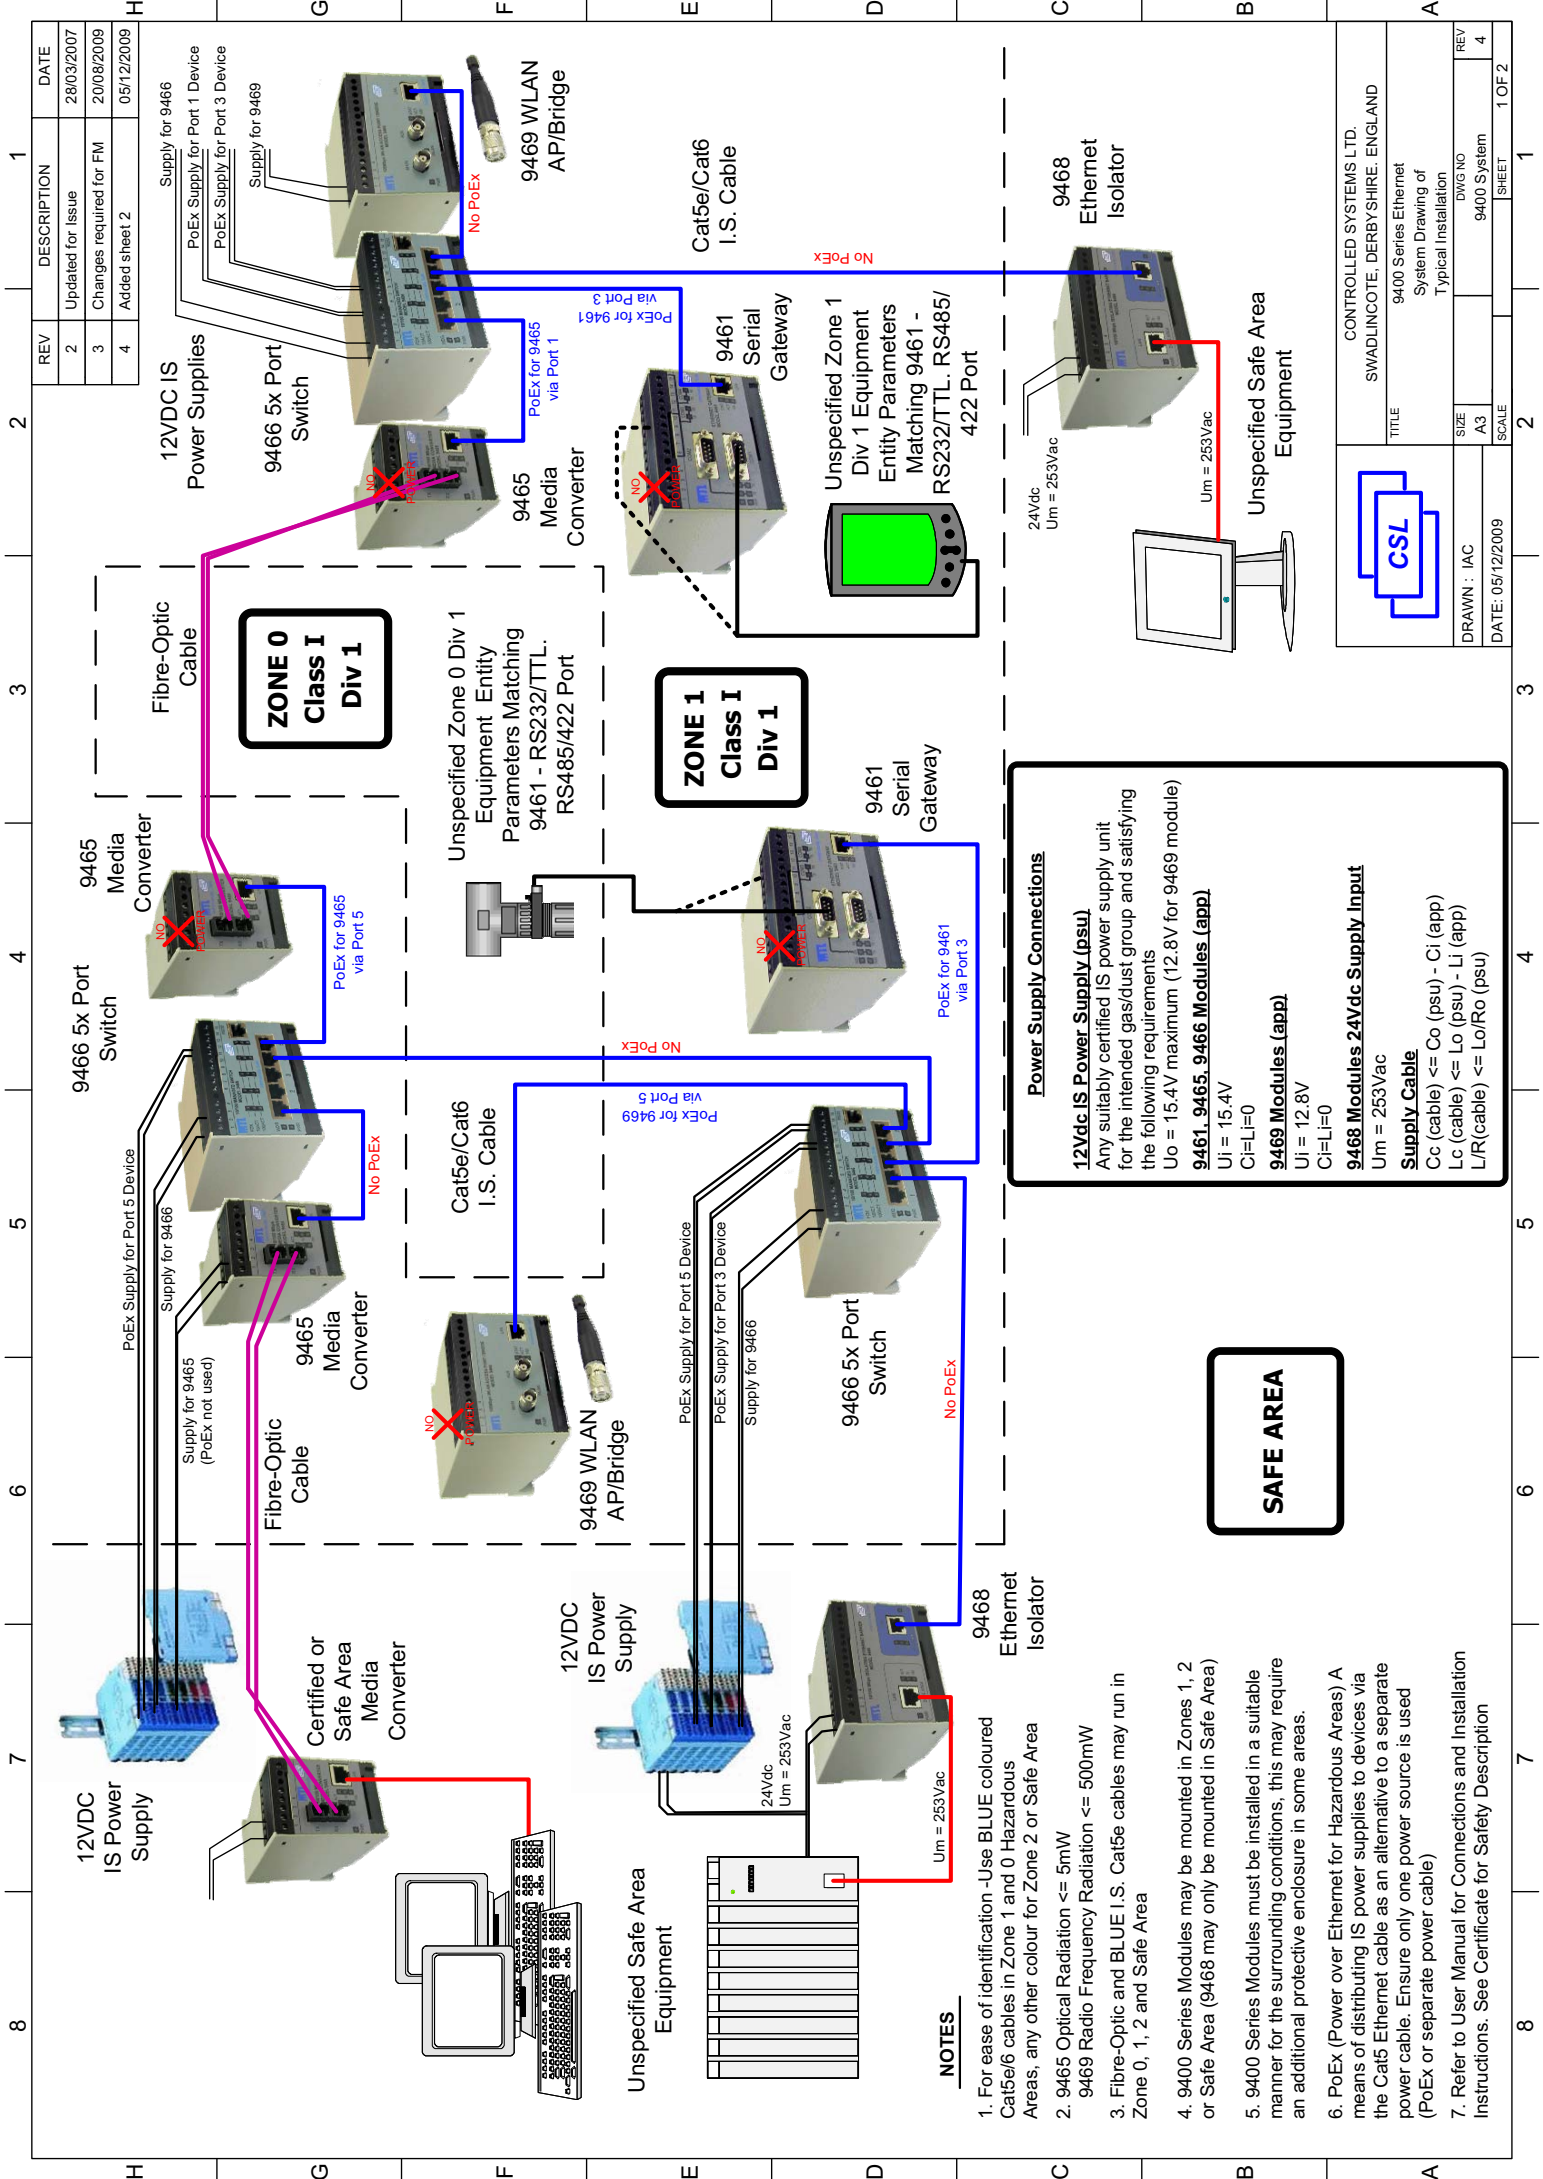

REV	DESCRIPTION	DATE
2	Updated for Issue	28/03/2007
3	Changes required for FM	20/08/2009
4	Added sheet 2	05/12/2009

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---

H	G	F	E	D	C	B	A
---	---	---	---	---	---	---	---

<b>CSL</b> CONTROLLED SYSTEMS LTD. SWADLINCOTE, DERBYSHIRE, ENGLAND		TITLE 9400 Series Ethernet System Drawing of Typical Installation
DRAWN : IAC DATE: 05/12/2009	SIZE A3	DWG NO 9400 System
SCALE 1 OF 2	SHEET 1	REV 4

**Power Supply Connections**

**12Vdc IS Power Supply (psu)**  
 Any suitably certified IS power supply unit for the intended gas/dust group and satisfying the following requirements  
 Uo = 15.4V maximum (12.8V for 9469 module)  
**9461, 9465, 9466 Modules (app)**  
 UI = 15.4V  
 CI=LI=0

**9469 Modules (app)**  
 UI = 12.8V  
 CI=LI=0

**9468 Modules 24Vdc Supply Input**  
 Um = 253Vac

**Supply Cable**  
 Cc (cable) <= Co (psu) - Ci (app)  
 Lc (cable) <= Lo (psu) - Li (app)  
 L/R (cable) <= Lo/Ro (psu)

**SAFE AREA**

**NOTES**

- For ease of identification -Use BLUE coloured Cat5e/6 cables in Zone 1 and 0 Hazardous Areas, any other colour for Zone 2 or Safe Area
- 9465 Optical Radiation <= 5mW  
9469 Radio Frequency Radiation <= 500mW
- Fibre-Optic and BLUE I.S. Cat5e cables may run in Zone 0, 1, 2 and Safe Area
- 9400 Series Modules may be mounted in Zones 1, 2 or Safe Area (9468 may only be mounted in Safe Area)
- 9400 Series Modules must be installed in a suitable manner for the surrounding conditions, this may require an additional protective enclosure in some areas.
- PoEx (Power over Ethernet for Hazardous Areas) A means of distributing IS power supplies to devices via the Cat5 Ethernet cable as an alternative to a separate power cable. Ensure only one power source is used (PoEx or separate power cable)
- Refer to User Manual for Connections and Installation Instructions. See Certificate for Safety Description



The 9461-ET Ethernet Gateway Module

Description	Location	Input Parameters					Output Parameters				
		Ui (V)	Ci (uF)	Li (mH)	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)		
Optional Input Power Supply	T1, T2 w.r.t. T3, T4	15.4	0	0	-	-	-	-	-		
RS485/422 Port 3	T5 w.r.t. T10 T8 w.r.t. T10 T17 w.r.t. T10 T18 w.r.t. T10 T19 w.r.t. T10	7.2	0	0	5.88	111	163	20	3.00		
RS485/422 Port 4	T11 w.r.t. T15 T12 w.r.t. T15 T13 w.r.t. T15 T14 w.r.t. T15	7.2	0	0	5.88	111	163	20	3.00		
TTLRS232 Port 1, CON 1	Pin 9 w.r.t. Pin 5 Pin 3 w.r.t. Pin 5 Pin 4 w.r.t. Pin 5 Pin 7 w.r.t. Pin 5 Pin 2 w.r.t. Pin 5 Pin 6 w.r.t. Pin 5 Pin 8 w.r.t. Pin 5	0	0	0	5.88	188	276	20	2.26		
TTLRS232 Port 2, CON 2	Pin 3 w.r.t. Pin 5 Pin 4 w.r.t. Pin 5 Pin 7 w.r.t. Pin 5 Pin 2 w.r.t. Pin 5 Pin 6 w.r.t. Pin 5 Pin 8 w.r.t. Pin 5	0	0	0	5.88	16	24	20	138		
RJ45 Connector (10/100 Base T) Without PoE*	Pin 1 w.r.t. Pin 5	12.5	0	0	3.15	3.4	2.7	50	1000		
RJ45 Connector (10/100 Base T) With PoE*	Pin 1 w.r.t. Pin 5	12.5	0	0	3.15	3.4	2.7	50	1000		

The 9466-ET 10/100 5-Port Switch

Desc.	Loc.	Input Parameters					Output Parameters				
		Ui (V)	Ci (uF)	Li (mH)	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)		
Optional Supply Input	T1, T2 w.r.t. T3, T4	15.4	0	0	-	-	-	-	-		
PoE 8-way Terminate*	T5 w.r.t. T7 T8 w.r.t. T9 T10 w.r.t. T11 T12 w.r.t. T11 T14 w.r.t. T15	15.4	0.075	0	-	-	-	-	-		
MH-DIN 8-way Manage	Pin 5 w.r.t. Pin 6 Pin 4, 3 & 4 w.r.t. Pin 5 & 6	12.5	0	0	3.15	3.4	2.7	50	1000		
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	0	0	0	5.88	48	72	20	15		
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T6 w.r.t. T7 for the output parameters.						
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T8 w.r.t. T9 for the output parameters.						
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T10 w.r.t. T11 for the output parameters.						
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T12 w.r.t. T13 for the output parameters.						
RJ45 Conn 10/100 Base T	Pin 1, 3 & 4 w.r.t. Pin 5 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T14 w.r.t. T15 for the output parameters.						

\* Not to be used if PoE is supplied at the 9468-ET Module.

The 9465-ET 10/100 Media Converter

Description	Location	Input Parameters					Output Parameters				
		Ui (V)	Ci (uF)	Li (mH)	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)		
Optional Supply Input	T1, T2 w.r.t. T3, T4	15.4	0	0	-	-	-	-	-		
RJ45 Connector (10/100 Base T) Without PoE*	Five-Optic Transmitter	-	-	-	-	-	-	-	-		
RJ45 Connector (10/100 Base T) With PoE*	Five-Optic Transmitter	15.4	0.075	0	Refer to parameters of IS power supply connected to T1, T2 w.r.t. T3, T4 for the output parameters.						

The 9468-ET Ethernet Isolator Module

Description	Location	Um (Vdc)	Ci (uF)	Li (mH)
Safe area supply input RJ45 from safe area 10/100 Base T	T1, T2 w.r.t. T3, T4	253	0	0

The 9468-ET may be connected to a single IS power supply at T14 and T15 if power-over-Ethernet (PoE) is required through pins 4, 5, 7 & 8 of the RJ45 connectors unless PoE is supplied at the 9466-ET Module.

Description	Location	Input Parameters					Output Parameters				
		Ui (V)	Ci (uF)	Li (mH)	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)		
IS Power Supply (optional PoE)**	T14 w.r.t. T15	15.4	0.075	0	-	-	-	-	-		
RJ45 by/for transceiver	Pin 4, 5, 7 & 8 w.r.t. Pin 1, 2, 3 & 6	15.4	0.075	0	Refer to parameters of IS power supply connected to T14 w.r.t. T15 for the output parameters.						

\*\* Power supply may only be connected if PoE is not already connected at the 9466 Floodlit.

\*\* RJ45 connectors on other 9400 Series Ethernet modules, each powered from a single internally safe supply.

Connection to other Ethernet systems requires special consideration and is outside the scope of this certificate; see installation drawing for connection details.

The 9469-ET WLAN AP/Bridge

Description	Location	Input Parameters					Output Parameters				
		Ui (V)	Ci (uF)	Li (mH)	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (uH)		
Optional Supply Input	Terminal T1, T2 w.r.t. T3, T4	12.8	0	0	-	-	-	-	-		
RJ45 Connector (10/100 Base T) Without PoE*	Refer to parameters of IS power supply connected to T1, T2 w.r.t. T3, T4 for the output parameters.	12.8	0.075	0							
RJ45 Connector (10/100 Base T) With PoE*	Refer to parameters of IS power supply connected to T1, T2 w.r.t. T3, T4 for the output parameters.	12.8	0.075	0							
Antenna A		-	-	-	-	-	-	-	-		
Antenna B		-	-	-	-	-	-	-	-		

H

G

F

E

D

C

B

A

NOTE: RJ45 ETHERNET PORTS\* ARE INTENDED FOR CONNECTION ONLY TO OTHER 9400 SERIES MODULES SHOWN ON THIS DRAWING.

\*(With the exception of 9468-ET Safe Area port)



CONTROLLED SYSTEMS LTD. SWADLINCOTE, DERBYSHIRE, ENGLAND	
TITLE	9400 Series Ethernet System Drawing of Typical Installation
DRAWN: IAC	SCALE
DATE: 05/12/2009	REV
	DWG NO 9400 System
	SHEET 2 OF 2





**MTL Instruments Pty Limited**

9 /12 Billabong Street  
Stafford  
Queensland 4053  
Australia  
Tel: + 61 1300 308 374 Fax: + 61 1300 308 463  
E-mail: enquiries@mtlaus.com.au

**Cooper Electric (Shanghai) Co.Ltd.**

Room 2001, China Life Tower  
16 Chao Yang Men Wai Street  
Chao Yang District, Beijing  
China 100020  
Tel: + 86 10 5980 0288 Fax: + 86 10 8562 5725  
E-mail: bjsales@mtl-inst.cn

**MTL Instruments sarl**

Les Carrés du Parc  
10 rue des Rosiéristes  
69410 Champagne au Mont d'Or  
France  
Tel: +33 (0)4 78 64 98 32 Fax: +33 (0)4 78 35 79 41  
E-mail: info@mtl-inst.fr

**MTL Instruments GmbH**

An der Gumpgesbrücke 17  
D-41564 Kaarst  
Germany  
Tel: +49 (0)2131 718930 Fax: +49 (0)2131 7189333  
E-mail: info@mtl.de

**MTL India**

No. 36, Nehru Street  
Off Old Mahabalipuram Road  
Sholinganallur  
Chennai - 600 119  
India  
Tel: + 91 (0)44 24501660/24501857 Fax: + 91 (0)44 24501463  
E-mail: sales@mtlindia.com

**MTL Italia srl**

Via Cantù 11  
I - 20092 Cinisello Balsamo MI  
Italy  
Tel: +39 (0)2 61802011 Fax: +39 (0)2 61294560  
E-mail: info@mtl-inst.it

**MTL Instruments KK**

MT Building 3F  
2-7-5 Shiba Daimon  
Minato-ku Tokyo  
Japan 105-0012  
Tel: +81 (0)3 6430 3128 Fax: +81 (0)3 6430 3129  
E-mail: sales@mtlkk.co.jp

**Cooper Crouse-Hinds Korea**

12F, Vision Tower  
707-2 Yeoksam-dong, Gangnam-gu  
Seoul 135-080  
South Korea  
Tel: +82 2 3484 6795 Fax: +82 2 3484 6778

**MTL Instruments BV**

MTL Instruments BV  
Terheijdensweg 465  
4825BK Breda  
The Netherlands  
Tel: +31(0)76 7505360 Fax: +31(0)76 7505370  
E-mail: info@mtlbenelux.com

**Cooper Crouse-Hinds Pte Ltd**

No.2 Serangoon North Avenue 5  
#06-01 Fu Yu Building  
Singapore 554911  
Tel: +65 6 487 7887 Fax: +65 6 487 7997  
E-mail: sales@mtlsing.com.sg

**MTL Instruments**

Villa No. 4, Sector 2-17, Street 6  
PO Box 53234,  
Abu Dhabi, UAE  
Tel: +971 2 446 6840 Fax: +971 2 446 6841  
E-mail: mtlgulf@mtl-inst.com

**Measurement Technology Limited**

Great Marlings, Butterfield, Luton, Beds  
England LU2 8DL  
Tel: +44 (0)1582 723633 Fax: +44 (0)1582 422283  
E-mail: enquiry@mtl-inst.com

**MTL Incorporated**

3413 N. Sam Houston Parkway W.  
Suite 210  
Houston TX 77086  
USA  
Tel: +1 281 571 8065 Fax: +1 281 571 8069  
E-mail: csinfo@mtl-inst.com

